Rechte in Bimplus

Bimplus manages rights on a two-level basis: First-level rights are the access rights at team level; second-level rights are the access rights at project level.

At team level, a team member with administrator privileges for the entire Bimplus team assigns superordinate rights. At project level, a project member with administrator privileges for the project (this is usually the BIM coordinator responsible for the construction project) assigns access rights to the other project members.

The following roles are available at project level:

Project viewer

Rights:

- Viewing models
- Viewing and downloading documents
- Viewing issues
- Viewing project properties

Role can be assigned by:

- Project administrator
- Team administrator
- Team owner

• Project editor

Same rights as the project viewer; plus:

- Creating models
- Uploading and downloading models
- Creating revisions of models
- Creating, editing, and deleting structures
- Uploading documents
- Creating, editing, and deleting Issues
- Editing project properties
- Checking for clashes

Role can be assigned by:

- Project administrator
- Team administrator
- Team owner

· Project administrator

Same rights as the project editor; plus:

- Deleting models
- Deleting documents
- Inviting and removing project members
- Assigning member roles at project level
- Assigning a property set template

Role can be assigned by:

- Team administrator
- Team owner

The following roles are available at team level:

• Team member

Rights:

- No rights at team level
- Can be given any role at project level

Role can be assigned by:

- Team administrator
- Team owner
- Team administrator

- Same rights as the project administrator; plus:
 Inviting and removing team members
 Creating and deleting projects
 Appointing and deleting project administrators
 Appointing and deleting other team administrators
 Managing licenses
 Defining, changing, and deleting property set templates

Role can be assigned by: - Team owner

• Team owner

Same rights as the team administrator; plus:
- First team administrator of a Bimplus team
- Owner of the Bimplus team
- Changing the team name
- This role *cannot* be changed

Role can be assigned by:
- The Bimplus user who opens a Bimplus team automatically becomes the team owner

Back to top